


# **MSD**<sup>™</sup> **IGNITION** **INSTALLATION INSTRUCTIONS**

Custom 8.5mm Super Conductor Wire Sets  
for use with MSD Front Drive Distributors  
Chevrolet: SB - PN 32859, BB - PN 32869

These wire sets are designed to be used with MSD's Front Drive Distributor. The illustration below shows the placement of the wires to the terminals of the cap in the normal Chevrolet firing order.

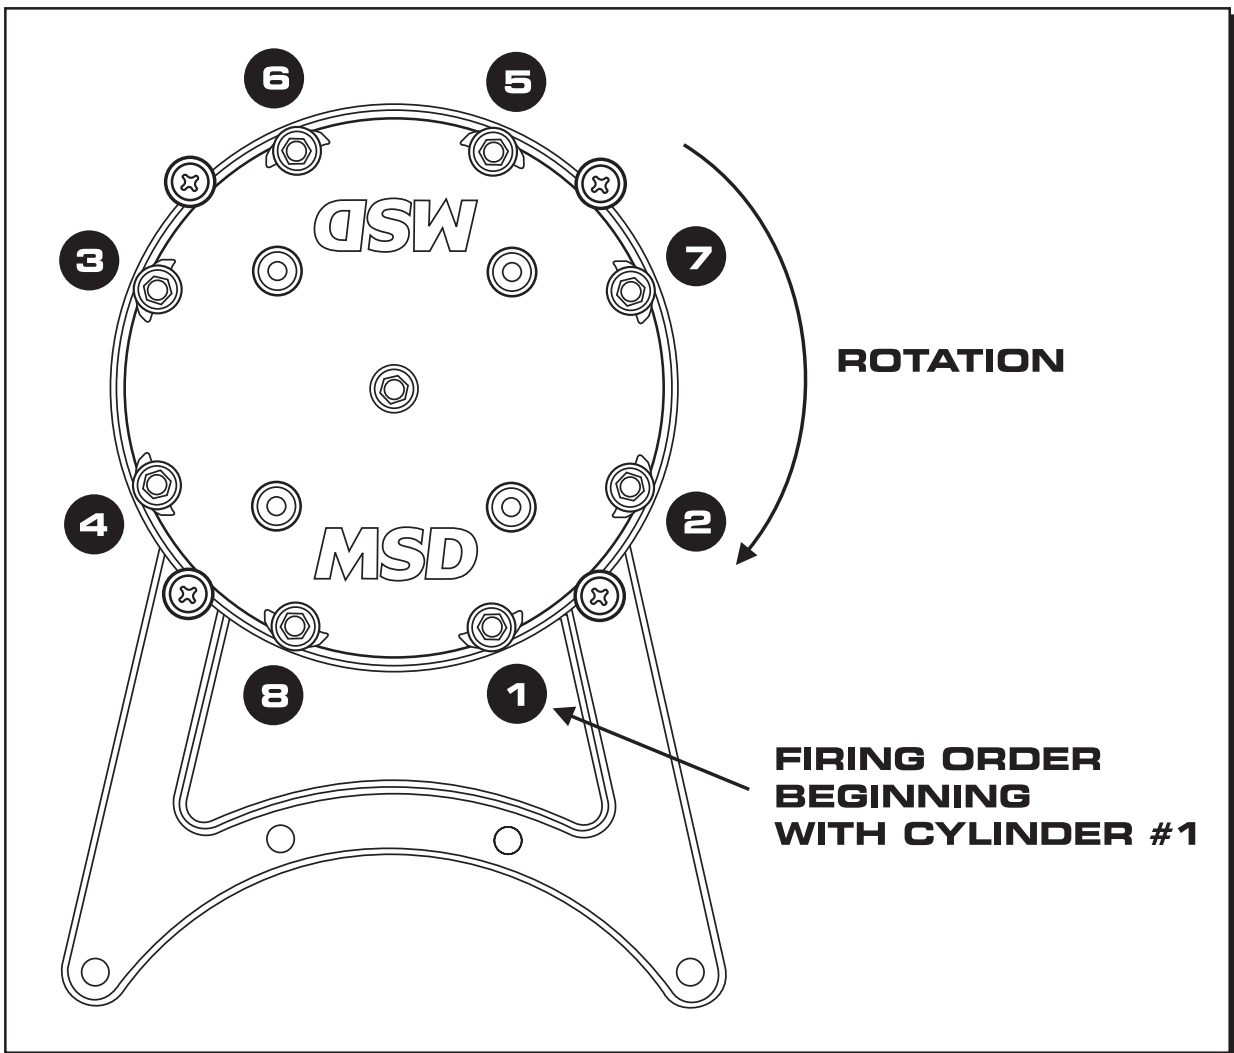

Spark Plug Wiring Placement