

MSD[®] IGNITION INSTALLATION INSTRUCTIONS

MSD 2-Step Launch Control for Ford Mod Motors '99-On PN 8734

Parts Included:

1 - 2-Step Launch Control
1 - Harness

Parts Bag:

1 - Tap
3 - Mounting Screws

Note: The 2-Step Launch Control is a low-rpm limiter that will not provide nor modify any over-rev protection. The stock high rpm rev limiter will still be active.

The MSD 2-Step Launch Control is designed for Ford Modular Engines with Coil-on-Plug ignitions. The 2-Step Control will provide consistent launches and quick 60-foot times. RPM adjustments are made via two rotary switches located on the harness side of the unit. The adjustment range is from 2,000 - 11,900 rpm, in 100 and 1000 rpm increments. An LED will illuminate when the launch rev limit is active.

Note: The engine must be 1,000 rpm below the set launch limit in order to activate.

Note: It is recommended to have the service manual for your vehicle.

Caution: Keeping the engine on a lower rpm limit may cause the Check Engine light to come on and could potentially damage the catalytic converter.

MOUNTING

The 2-Step Control can be mounted in any position but keep in mind to mount it so the rotary dials are accessible for adjustments. Hardware is supplied for mounting. Before mounting the unit, confirm that the wiring harnesses reach their connections.

WIRING	
8-WIRE CONNECTOR	
TAN (8)	Signal Connections.
8-WIRE CONNECTOR	
RED	12-Volt Connection through this single Red wire.
3-WIRE CONNECTOR	
BLACK	Connects to a good engine ground or the negative battery terminal.
BLUE	Activation Wire. When grounded, the launch feature will be active.
WHITE/BLUE	Activation Wire. When switched to 12 volts, the launch feature will be active.

LED

The built-in LED will illuminate when the 2-Step Launch Control is activated.

Note: Refer to your service manual for coil accessibility.

1. Connect the 3-pin harness to the 2-step and connect the Black wire to the good engine or chassis ground.
2. Disconnect the 2-pin connectors from each of the eight ignition coils.
3. Connect all eight of the 2-pin male connectors from the MSD harness into the factory coil connectors.
4. Plug the 8-pin connector with the single Red wire from the 2-Step to the connector with Black wires.
5. Turn the key to the On position – do NOT start the engine. Look at the LED on the 2-Step:
LED On – This confirms that the wiring is correct and you can move to step 6 (Figure 1).
LED Off – The wiring is different for this application and needs to be changed. Turn the key Off, plug the 8-pin connector with the eight Gray wires into the connector with the single Red wire (Figure 2).
6. Connect the 8-pin harness with the tan wires to the remaining connector on the harness.
7. Connect all eight of the female 2-pin connectors from the MSD harness into the factory coils.

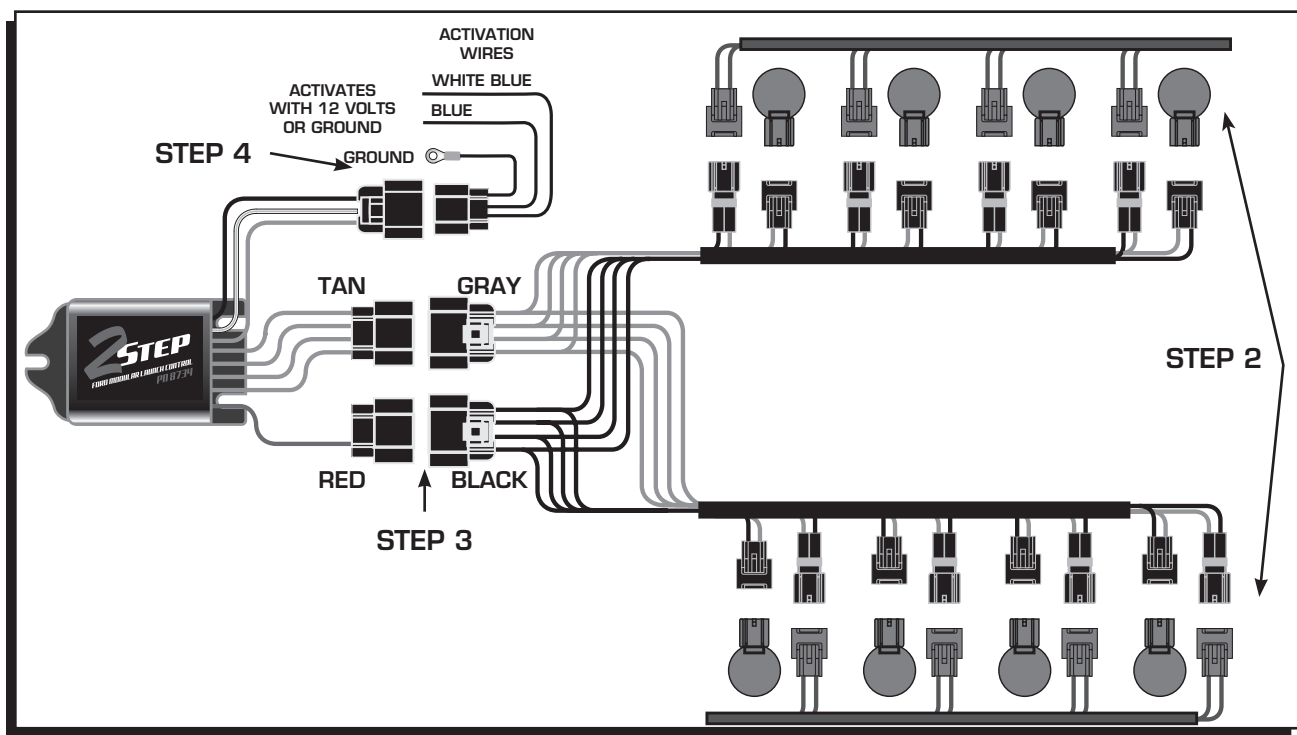


Figure 1 Wiring the 2-Step Launch Control.

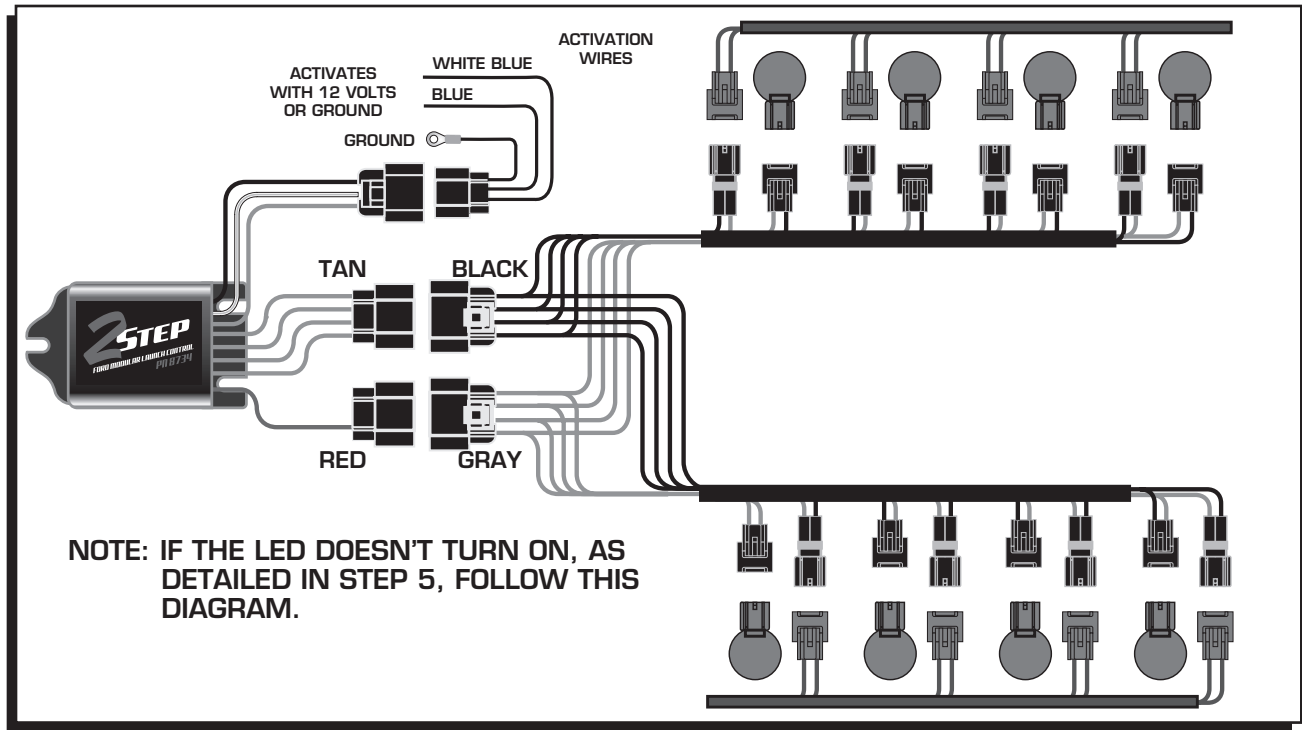


Figure 2 Alternate Wiring.

CONNECT THE ACTIVATION WIRE

The launch rpm limit can be activated through a ground or a 12 volt source.

Ground: Switch the Blue wire to ground to activate the launch limit.

12 volts: Connect the White/Blue wire to 12 volts to activate the launch limit.

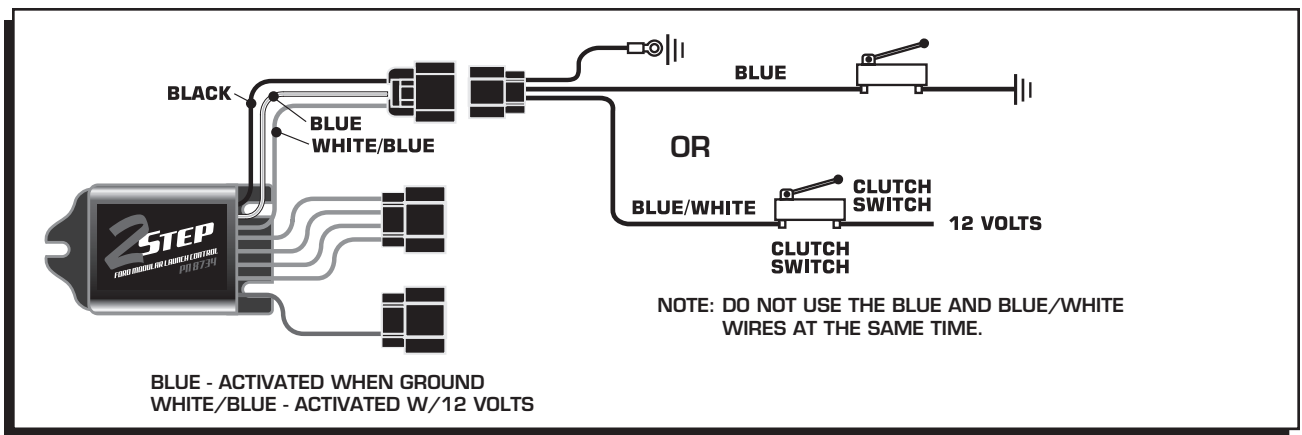


Figure 3 Wiring the Launch Activation Wire.

CONFIRM INSTALLATION

With the power On, engine running, activate the clutch or On/Off switch. If connected correct, the LED will illuminate when the clutch is activated. To verify the rpm, set the limit at a lower rpm, such as 3,000, and test the system.

If the engine has trouble starting or running, check the following:

- Ground or switched 12 volts connection
- Coil connections
- The two 8-pin connectors may be in the wrong position and should be swapped and tested again.

